


1080p HD pen camera instructions book

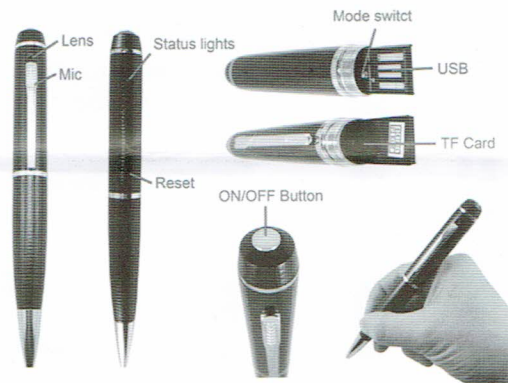

1, turn on:

First, put the TF card insert in the camera and then press button 2 seconds, when yellow and blue lights flashing at the same time, initialize the yellow light normally on, after is enter standby mode.

2, Video:

put the mode switch to Numbers 2, then yellow light, normally video into standby mode; Short press button, yellow lights will off, start video. 30 minutes to save a document, then short press the button, to stop the video and save the file, long bright yellow light.

3 take photos:

put the mode switch to Number 1, then yellow light reveal long light. into the photo standby state; Short press button, the blue lights flashing one times, they mean is take a photo succeed. the same way.

4, recording separately:

In the video mode standby mode, long press button for 2 seconds, the yellow lights off, blue lights flash, into a separate state, recording every 30 minutes to save a document; Short press button again, stop the recording and save the file, blue lights, yellow lights will long bright.

5, to turn it off:

Method 1: long press the button for 3 seconds, yellow lights off, saying the camera turn off.
Method 2: in standby mode, 3 minutes without any operation, machine automatic shutdown.

6, low electric alarm:

Yellow and blue lights interactive flash 5 times, This product immediately turned off (if the current state to video, this product first will automatically stop recording), should be timely to recharge.

7, charging status:

when the camera charging that yellow lights flashing, charging full then the yellow light long on.

8, no card status:

After yellow and blue lights flashing at the same 9 times, they turn off.

9, time Settings:

when video finish, camera machine to connect the computer, pop-up removable disk, open the removable disk of Time. TXT file, and change file time.

10 reset: change

when resetting, Non-metallic hard reset, please use Non-metallic hard inserted into the reset hole, and then lightly press the reset button, complete the reset, reset after the completion of the machine was turned off.

11, writing:

Rotating written, ink out automatically, can be written to reverse direction, the cartridge will take back.

12, the network camera features:

Connected to computer, seek out "removable disk" after, press button, the "removable disk" will change to "USB video device", double-click mouse on the "USB video device" that can be used it.

13, the related parameters

Video files: 1920 * 1080 resolution AVI
pictures: 2560 * 1440 resolution JPEG photos

14, simple questions to answer.

1. can't turn on camera: please put the machine to charge 1 to 2 hours before the test. According to the reset button to restart.
2. when open the camera but not working: please check to see is there into the memory card, or format the card.
3. Can't link to the computer: check the product is good if or not, the best on the back of the USB port to connect to the computer.
4. Play the video on the computer has off phenomenon: check the computer configuration, player software, suggest using VLC.

- > HD Video and Image Recording
- > Smooth playback and Natural true color
- > Multifunction & Easy to use
- > Exquisite sound recording
- > Widely supported file formats
- > Efficient & Stability & Rapid Response
- > Applied fields is very wide

Mini DV Feature >>

1080P



U-Disk

Pc Camera

Audio

Photo

Video

SD Card

sensor



S859



1080P

FullHD

1920x1080



MADE IN CHINA

5859



No

Real[1920x1080

Real high

USB 2.0



HD 1080P

